


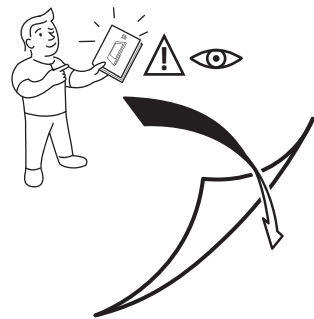
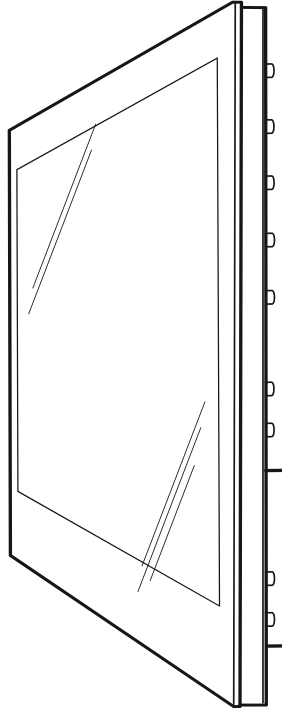
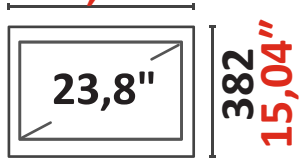


594
23,39"

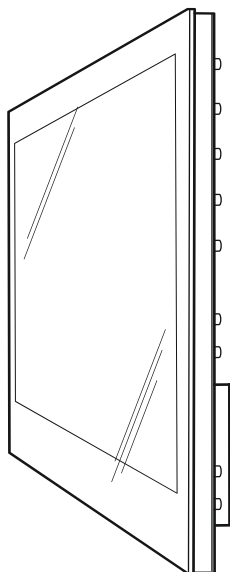

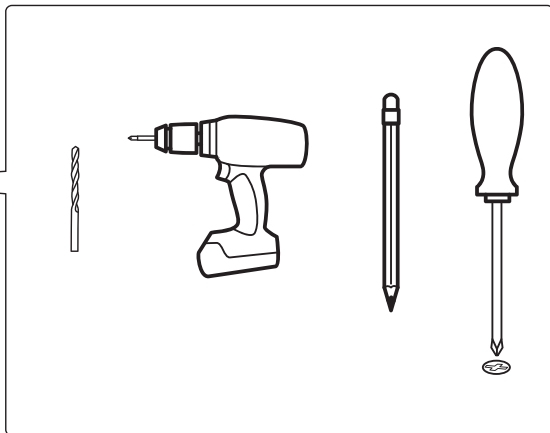

x8

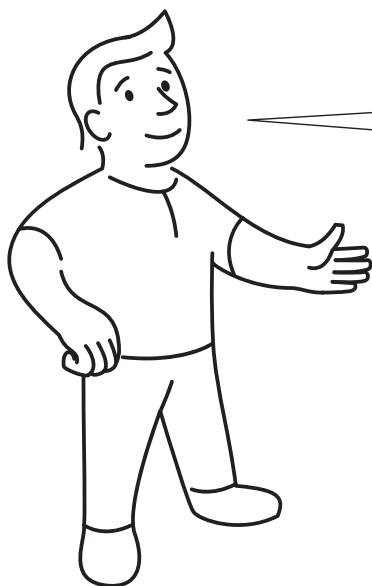

blum

DTC



x8




KESSEBÖHMER

HÄFELE




x4




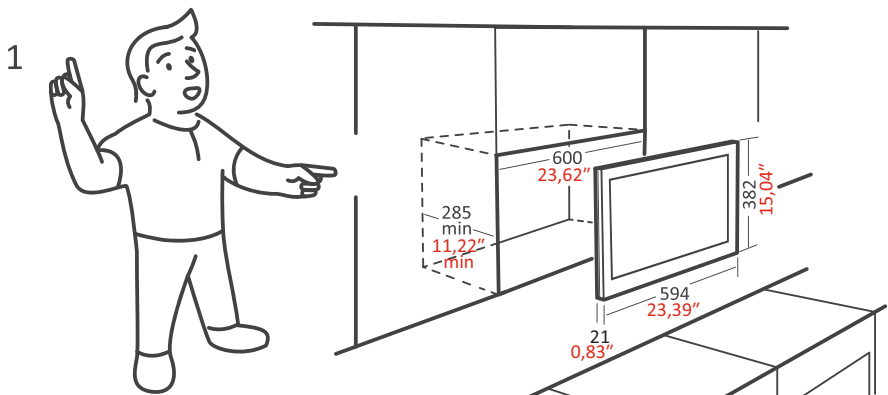

A

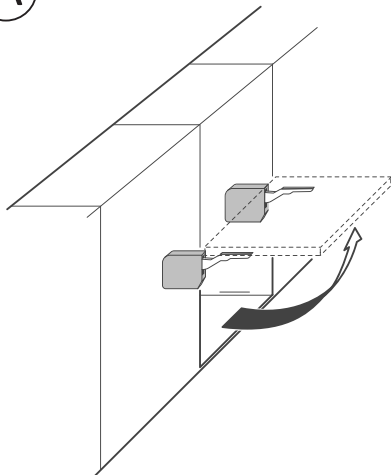

B

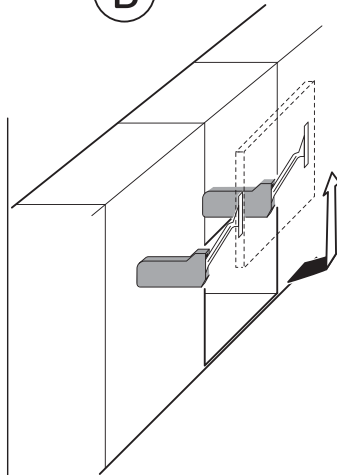

1

blum
Aventos HK27

+



2

DTC
DTC TOP STAY SF
SF00AH02A

+



3

KESSEBÖHMER
FREEflap forte-E

HÄFELE
Free Flap 3.15 E



1

blum
Aventos HL27/35

+



2

KESSEBÖHMER
FREEslide Q3us

HÄFELE
Free Up Q3us






A1




blum

Aventos HK27

DTC
Global Quality Benchmark

DTC TOP STAY SF

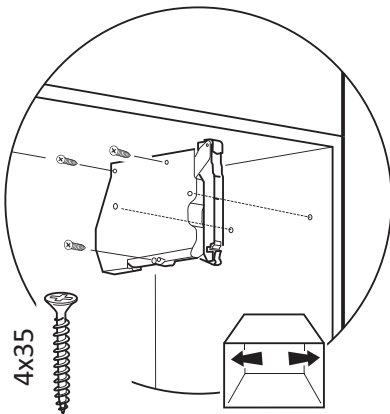
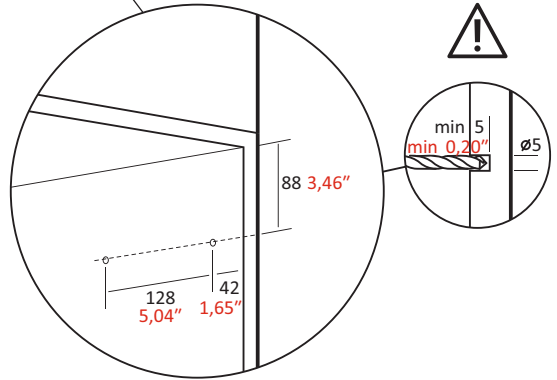
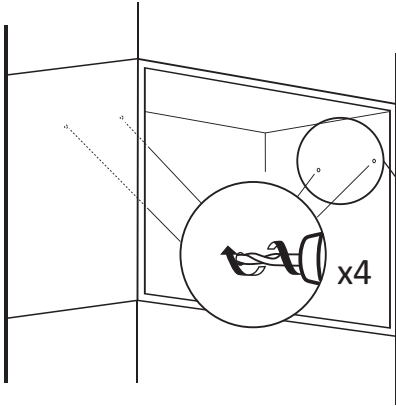


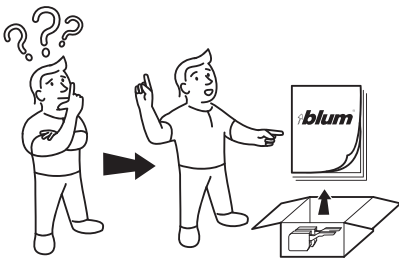
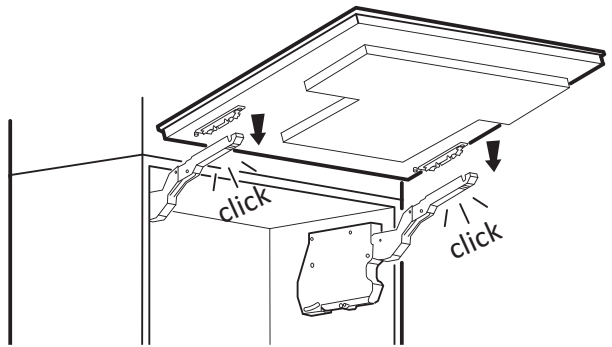
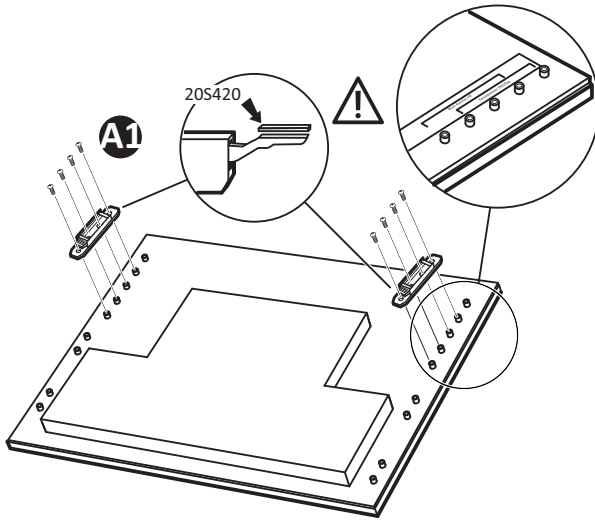


A2

blum

Aventos HK TOP27

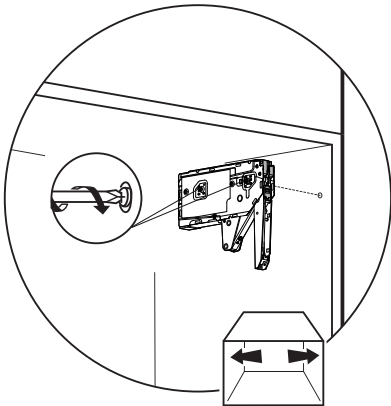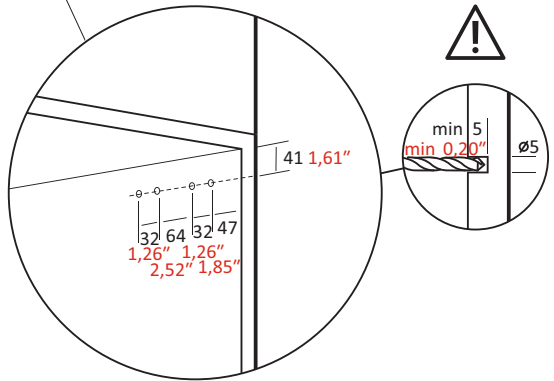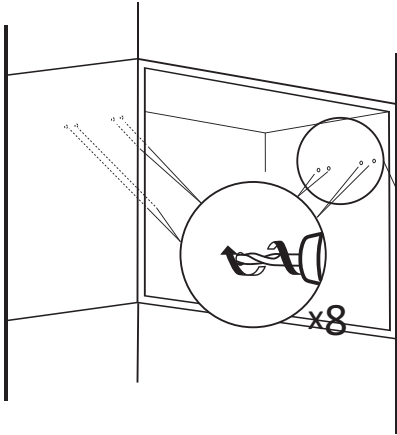


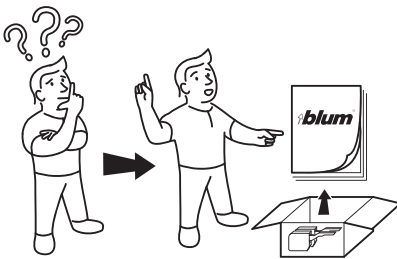
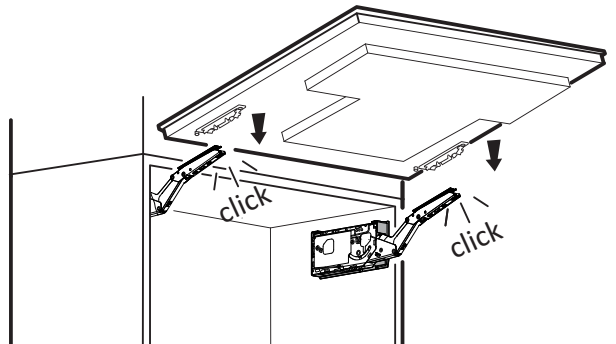
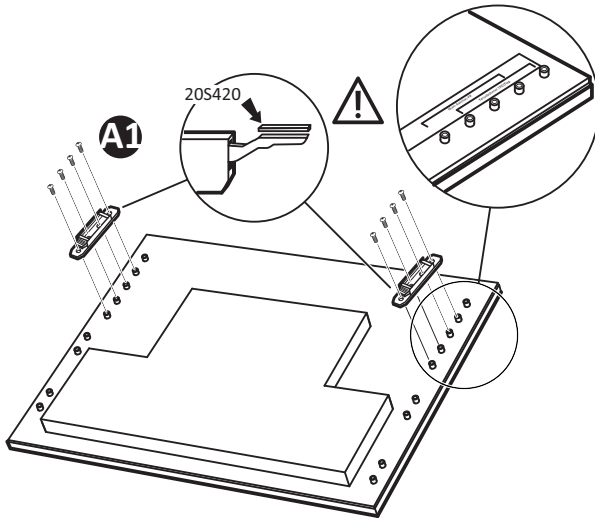


A 3

KESSEBÖHMER
FREEflap forte-E

HÄFELE
Free Flap 3.15 E

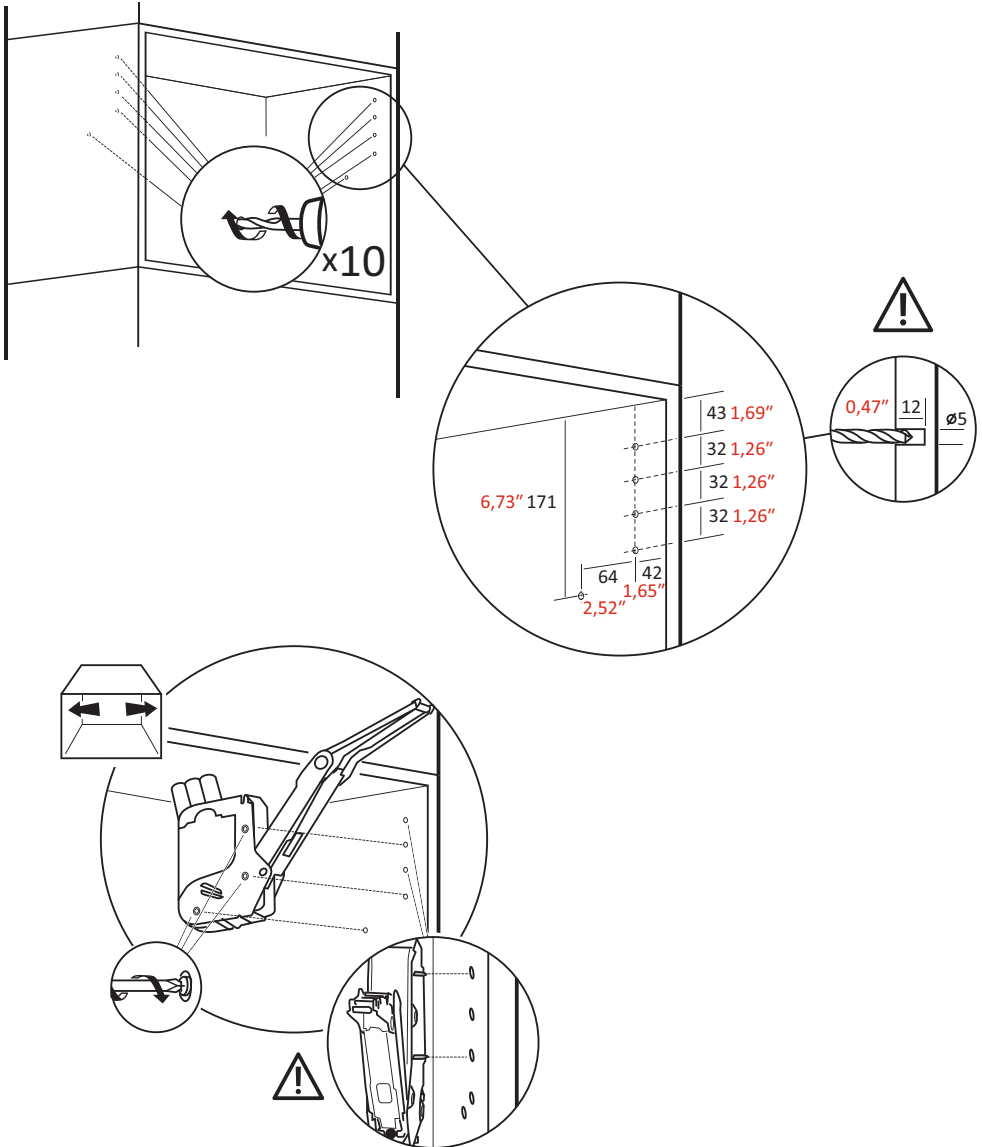



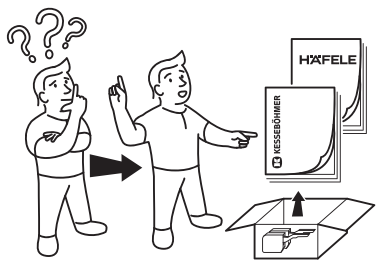
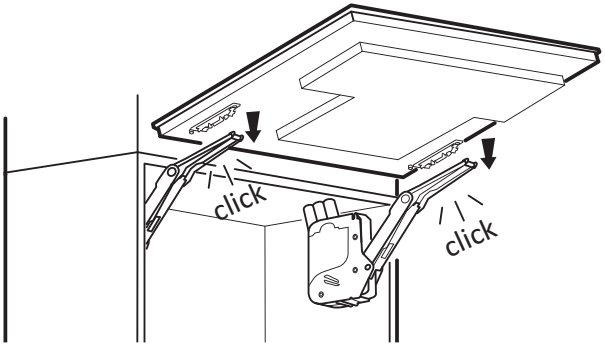
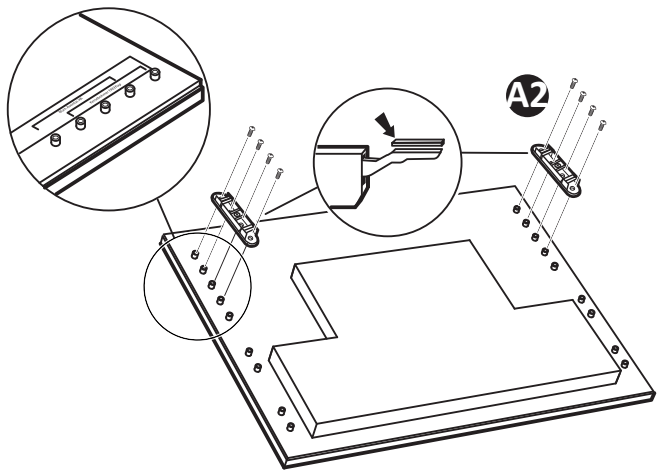


B1

↑ blum®

Aventos HL27/35



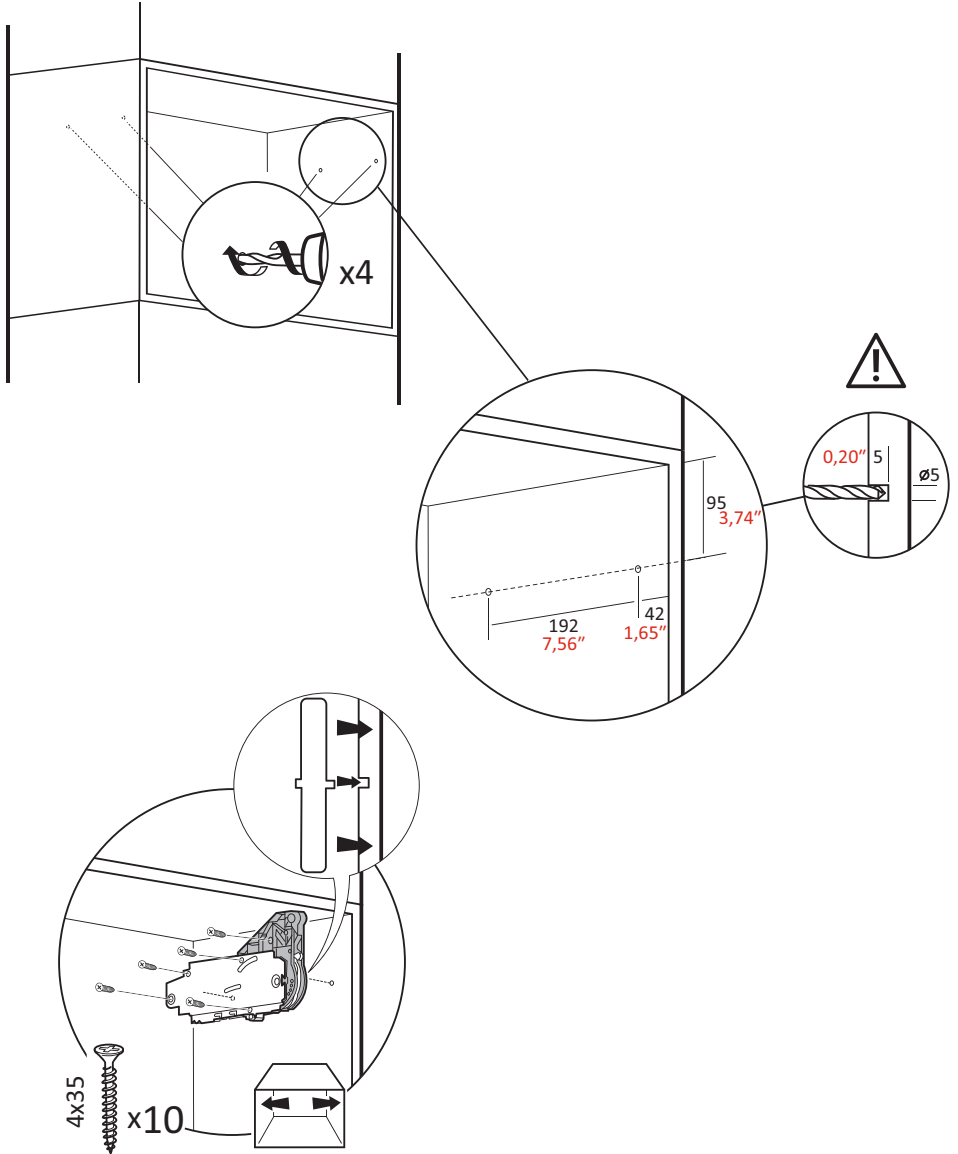


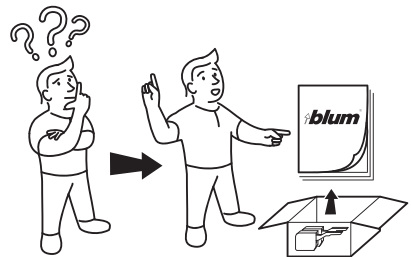
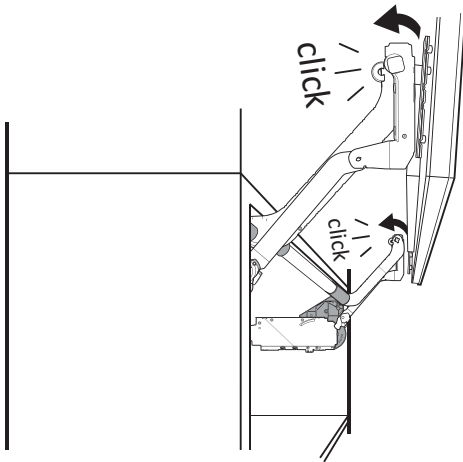
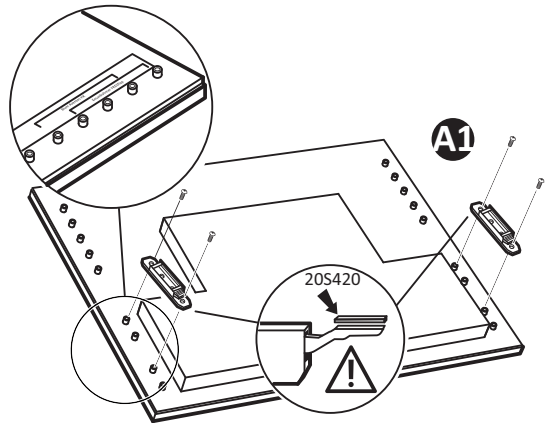
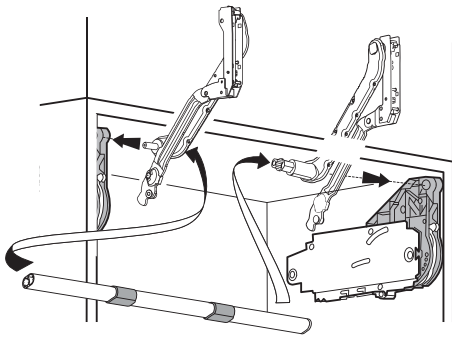


B2

KESSEBÖHMER
FREEslide Q3us

HÄFELE
Free Up Q3us

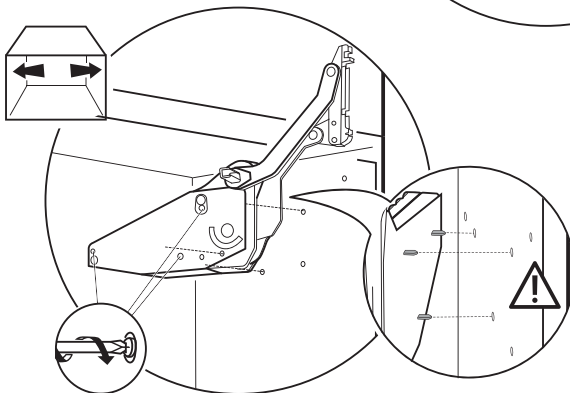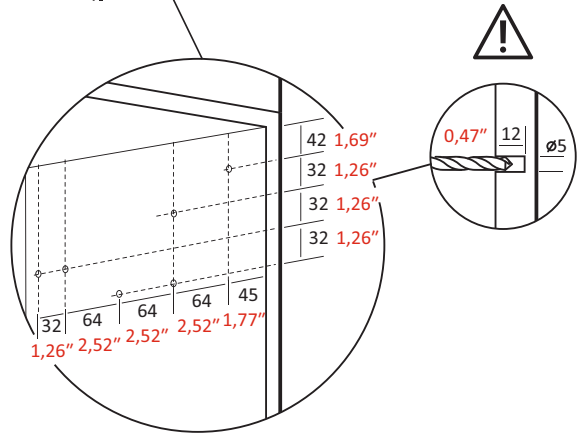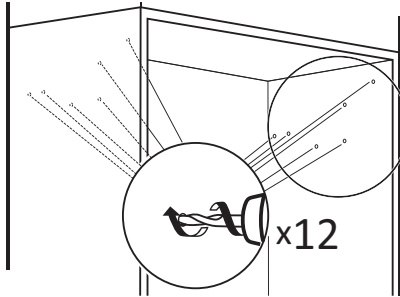


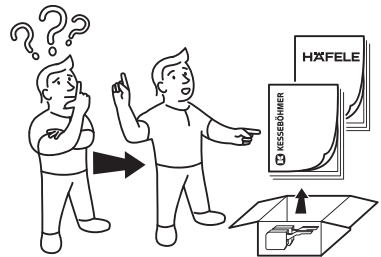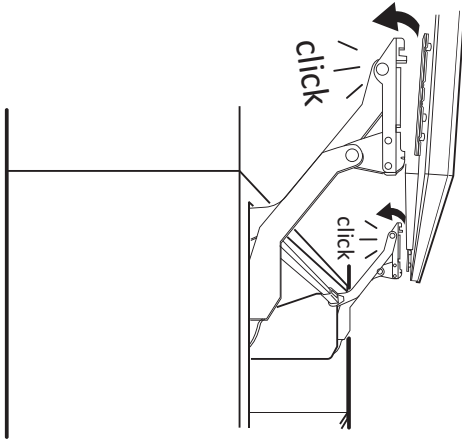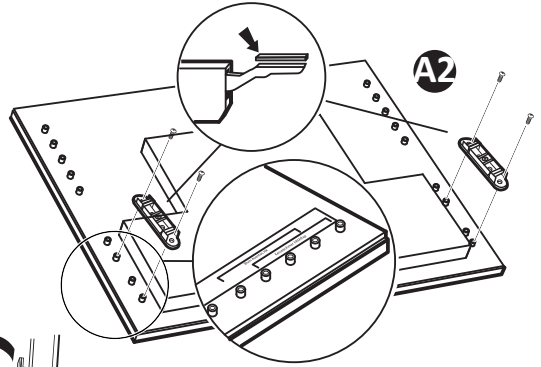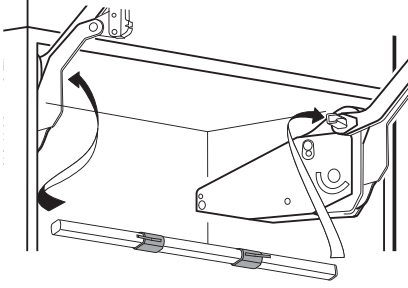


3




A

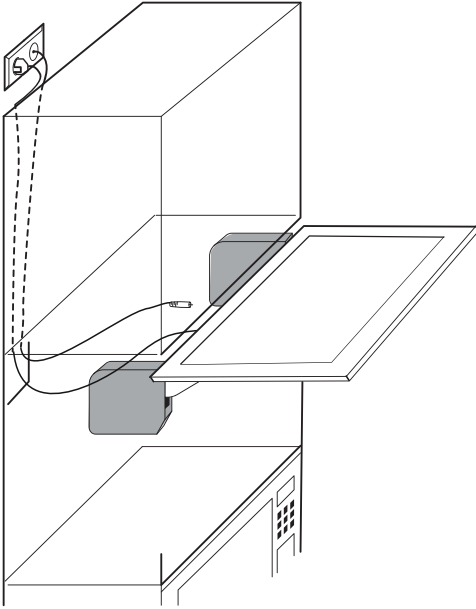




B

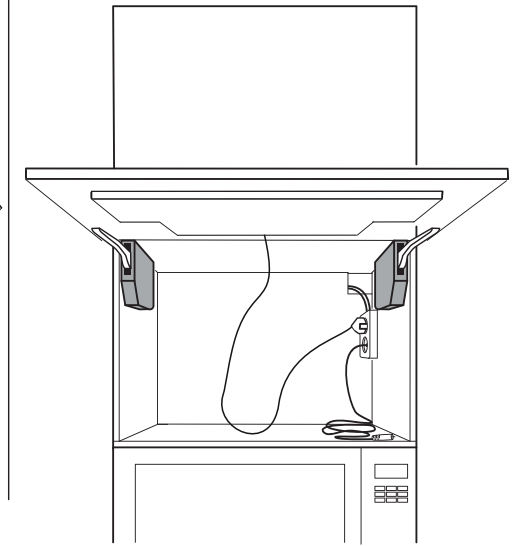



4

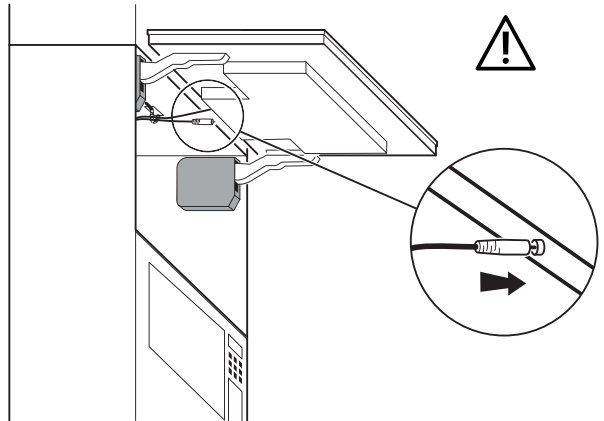

5

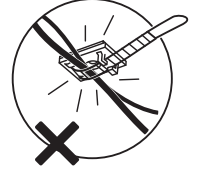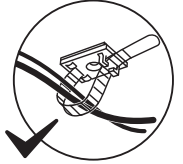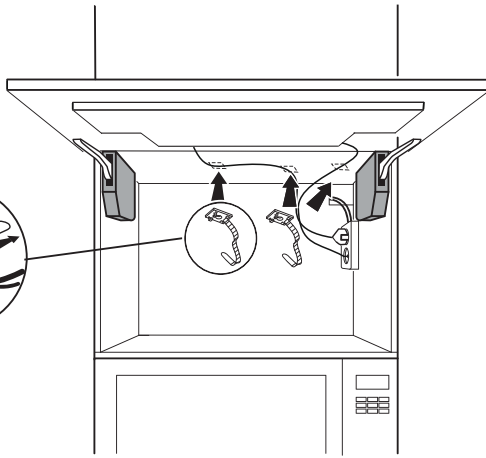


6

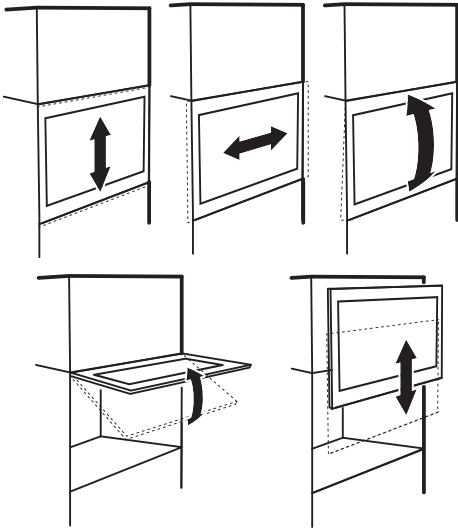

7

A

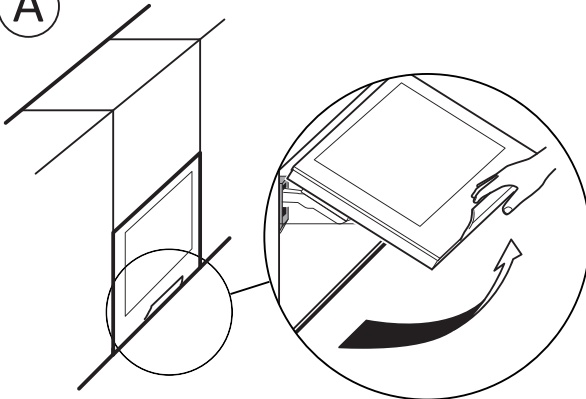

B

